

ALUMNO CHAIR INSTRUCTIONS FOR ADJUSTMENT

www.workspace.com.au Sydney | Melbourne | Adelaide | Canberra | Brisbane



- SEAT HEIGHT: Pull up on the paddle lever with fingertips and allow the gas-spring to lift the seat. Release the lever when the desired height is reached. Your thighs should be horizontal when your feet are flat on the floor.
- ② SEAT TILT LOCK: Slide the paddle lever in or out to lock or unlock the seat tilt function. The seat tilt can be locked only in the upright position.
- ③ SEAT TILT SPRING TENSION: Rotate the knob under the seat clockwise to decrease tilt resistance and anti-clockwise to increase tilt resistance.
- 4 ARM HEIGHT ADJUSTMENT: Squeeze the lever under the arm-rest to unlock. Adjust to desired height and release the lever to lock in position.