

Instructions to repair the Elan Flip Mechanism

When the table top is flipped down in the horizontal position the latches in the mechanism should engage and keep the table top securely locked. It can be unlocked only when pressing the handle.

If the table top remains unlocked even when the handle is untouched follow this procedure to fix:

1. Remove the top plate of the mechanism and note the placement of the cable.
2. The cable needs to be removed and replaced into a longer slot. If the cable is in slot ③, move it to slot ①. If the cable is on slot ①, move it to slot ②.
3. Replace the cable's collar securely in the Housing Slot.
4. Replace the top plate and secure by lightly tightening the four screws.
5. Now install the Mechanism as normal.

If the table top remains locked even when pressing the handle follow this procedure to fix:

1. Repeat as above, except the cable needs to be moved into a shorter slot. If the cable is in slot ②, move it to slot ①. If the cable is in slot ①, move it to slot ③.

